

# SINTERING-DATA-SHEET

DR. FRITSCH GmbH & Co. KG

Dieselstraße 8

70736 Fellbach

Tel. 0711-518320; Fax 0711-5183210

<b>powder - code:</b>	Diafecu-8515 B
-----------------------	----------------

<b>main component:</b>	Fe	<b>binder:</b>	2% alcohol	<b>date:</b>	29.07.2011
<b>machine type:</b>	DSP-25	<b>aver. Grain size</b>		<b>testperson:</b>	CT
<b>utilisation:</b>	Substitute for Diafecu-8515				

<b>heating by</b>	<b>die:</b>	X	<b>temperature measure-</b>	<b>pyroscope:</b>	
	<b>punches:</b>		<b>ment by:</b>	<b>thermocouple:</b>	X


<b>temperature:</b>	°C	660	700	740	780	820	860	900	
<b>specific pressure:</b>	N/mm <sup>2</sup>	35	==>						
<b>sintering time:</b>	min	3	==>						

<b>bending strength:</b>	N/mm <sup>2</sup>								
<b>stretch at break:</b>	%								
<b>average hardness:</b>	HRB	89	99	99	96	92	91	88	
<b>hardness scattering:</b>	HRB	89-90	98-100	99-100	96-97	91-93	91	88-89	
<b>average hardness:</b>	HRC								
<b>hardness scattering:</b>	HRC								
<b>weight:</b>	g	17	==>						
<b>weight after sintering:</b>	g								

<b>Volume</b> ( $V = G_s - G_w$ )	cm <sup>3</sup>								
<b>Density</b> ( $D = G_s / V$ )	g/cm <sup>3</sup>	7,16	7,67	7,75	7,76	7,77	7,77	7,77	

<b>weight loss</b> ( $G = G_e - G_s$ )	g								
<b>rel. Weight loss</b> ( $G_r = G * 100$ )	%								

<b>notes:</b>									
---------------	--	--	--	--	--	--	--	--	--

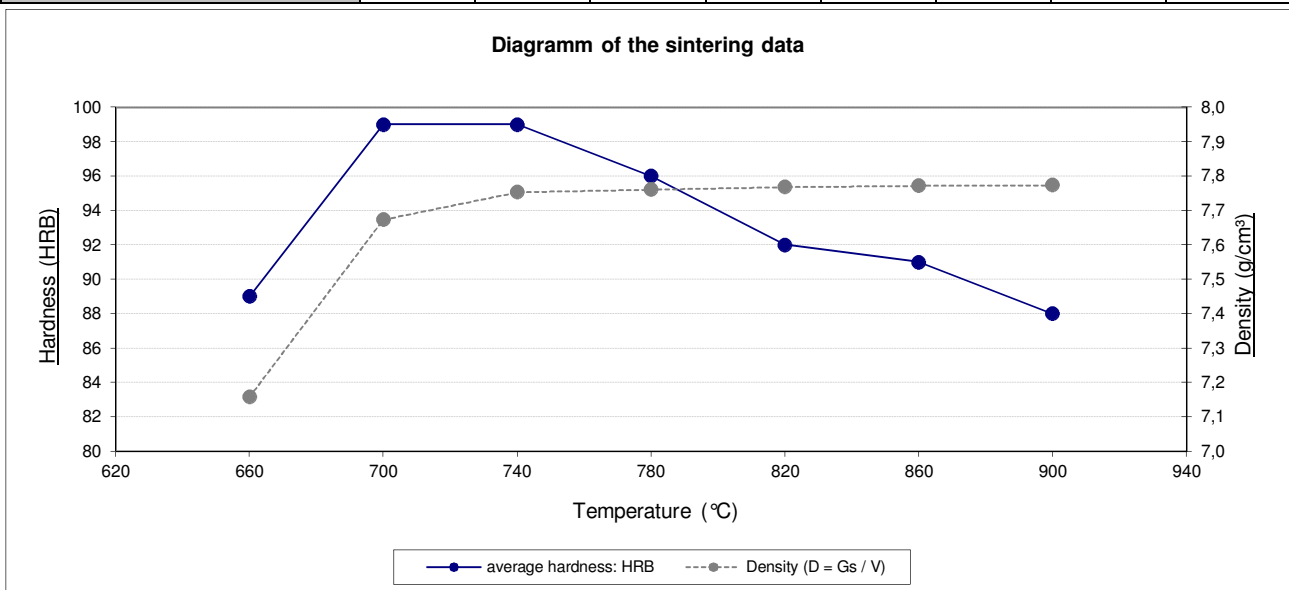

**Attention:**

Depending on mould-geometry and type and place of temperature-measurement an increase up to 60 °C must be done to get the same result !  
 In case of moulds with a high number of graphite punches a certain friction value needs to be considered. To obtain the detailed formula you are welcome to contact us.

Property of Dr. Fritsch GmbH & Co.KG. Transmission only allowed in explicit agreement with the management.